


Iwaki Direct Drive Pump

NRD Series (built-in type)

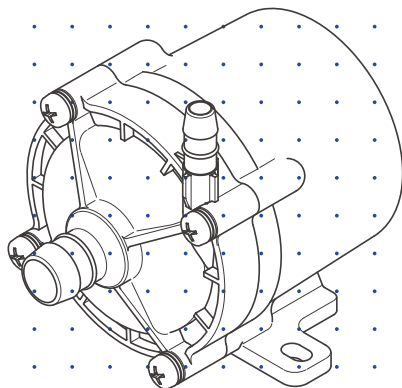

Instruction manual

Thank you for choosing our product.



Please read through this instruction manual before use.

This instruction manual describes important precautions and instructions for the product. Always keep it on hand for quick reference.

Order confirmation

Open the package and check that the product conforms to your order. If any problem or inconsistency is found, immediately contact your distributor.

a. Check if the delivery is correct.

Check the nameplate to see if the information such as model codes, discharge capacity and discharge pressure are as ordered.

Iwaki Direct Drive Pump			
MODEL			
MAX.CAPACITY	L/min	VOLTS	V
MAX.HEAD	m	AMPS	A
RATING	Year		
MFG.No.			
DO NOT RUN PUMP DRY			
IWAKI CO.,LTD. MADE IN JAPAN			
6-6,Kanda-Sudacho 2-chome Chiyoda-ku Tokyo Japan			




Spec label for the European market

Iwaki Direct Drive Pump			
MODEL			
MAX.CAPACITY	ℓ/min	VOLTS	V
MAX.HEAD	m	AMPS	A
RATING			
DO NOT RUN PUMP DRY			
MFG.No.			
IWAKI CO.,LTD. MADE IN JAPAN			



Spec label for any area other than the European market

Iwaki Direct Drive Pump			
MODEL			
MAX.CAPACITY	L/min	VOLTS	V
MAX.HEAD	m	AMPS	A
RATING	CONT.	INSULATION CLASS A	Year
DO NOT RUN PUMP DRY			
MFG.No.			
IWAKI CO.,LTD. MADE IN JAPAN			
6-6,Kanda-Sudacho 2-chome Chiyoda-ku Tokyo Japan			

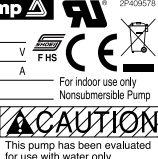

Spec label for the American market

*The CE marking on our product(s) is for us to market the product(s) into the European market, however, the CE marking does not ensure any safety or conformity of the product(s) outside the European market.

When the pump is incorporated into the equipment marketed in the European market, such equipment must meet all the requirements of applicable directives. In such a case, any person who places the equipment on the market must carry a CE mark on the equipment as a manufacturer.

b. Check if the delivery is damaged or deformed.

Check for transit damage and loose bolts.

Contents

Order confirmation	2
--------------------------	---

Safety instructions 5

WARNING.....	6
--------------	---

CAUTION	7
---------------	---

Precautions for use	9
---------------------------	---

Overview..... 11

Introduction.....	11
-------------------	----

Pump structure & Operating principle	11
--	----

Part names.....	12
-----------------	----

Limitations.....	12
------------------	----

Before operation	12
------------------------	----

Priming.....	13
--------------	----

Liquid to be handled	13
----------------------------	----

ON-OFF operation.....	13
-----------------------	----

Identification codes.....	14
---------------------------	----

Installation 15

Pump mounting.....	15
--------------------	----

Pipework	16
----------------	----

Plumbing layout	16
-----------------------	----

Discharge & Suction valves	17
----------------------------------	----

Pressure gauge	17
----------------------	----

Drain valve.....	17
------------------	----

Plumbing.....	17
---------------	----

Plumbing precautions	19
----------------------------	----

Suction line.....	19
-------------------	----

Discharge line.....	20
---------------------	----

Wiring.....	20
-------------	----

Power line	20
------------------	----

PWM (Pulse Width Modulation) control.....	21
PWM and Pump speed	22
Motor-driver input circuit.....	23
Encoder output	23
Motor-driver output circuit	23
Rated/Starting current	24
Wiring examples	24
Specification (connector).....	24
Wiring diagram (general).....	25
Wiring diagram (with no PWM control signal)	25
Operation.....	26
Pump operation	26
Start-up.....	26
Shutdown	28
Maintenance.....	29
Troubleshooting.....	29
Retightening of pump head fixing screws.....	30
Drainage.....	31
Blowdown	31
Inspection.....	33
Daily inspection	33
Specification/Outer dimension	34
Specification	34
Wet ends.....	35
NRD-08Z.....	35
Outer dimensions.....	36
NRD-08Z with sideways-mounted base	36
NRD-08Z with longways-mounted base	37
Performance curves	38
NRD-08Z.....	38
EC DECLARATION OF CONFORMITY.....	39

Safety instructions

Read through this section before use. This section describes important information for you to prevent personal injury or property damage.

■ Symbols

In this instruction manual, the degree of risk caused by incorrect use is noted with the following symbols. Please pay attention to the information associated with the symbols.



WARNING

Indicates mishandling could lead to a fatal or serious accident.



CAUTION

Indicates mishandling could lead to personal injury or property damage.

A symbol accompanies each precaution, suggesting the use of "Caution", "Prohibited actions" or specific "Requirements".

Caution marks



Caution



Electrical
shock

Prohibited mark



Prohibited



Do not rework
or alter



Keep fire away

Requirement mark



Requirement



Wear
protection



Export Restrictions

Technical information contained in this instruction manual might be treated as controlled technology in your countries, due to agreements in international regime for export control.

Please be reminded that export license/permission could be required when this manual is provided, due to export control regulations of your country.

WARNING

Turn off power before service

Risk of electrical shock. Be sure to turn off power to stop the pump and related devices before service is performed.



Stop operation

If you notice any abnormal or dangerous conditions, suspend operation immediately and inspect/solve problems.



Do not use the pump in any condition other than its intended purpose

The use of the pump in any conditions other than those clearly specified may result in failure or injury. Use this product in specified conditions only.



Do not modify the pump

Alterations to the pump carries a high degree of risk. It is not the manufacturer's responsibility for any failure or injury resulting from alterations to the pump.



Wear protective clothing

Always wear protective clothing such as an eye protection, chemical resistant gloves, a mask and a face shield during disassembly, assembly or maintenance work. The specific solution will dictate the degree of protection. Refer to SDS precautions from the solution supplier.



Use of hazardous chemicals

Risk of personal injury or fire. Check/monitor plumbing system for a leak before or in operation when handling a flammable, corrosive or harmful liquid.



Do not damage the power cable

Do not pull, knot, or crush the power cable. Damage to the power cable could lead to a fire or electrical shock if cut or broken.



Do not operate the pump in a flammable atmosphere

Do not place explosive or flammable material near the pump.



! CAUTION

Qualified personnel only

The pump should be handled or operated by qualified personnel with a full understanding of the pump. Any person not familiar with the product should not take part in the operation or maintenance of the pump.



Requirement

Use specified power only

Do not apply power other than that specified on the nameplate. Otherwise, failure or fire may result. Ensure the pump is properly grounded.



Requirement

Do not run pump dry

Running the pump without liquid, friction heat builds up and damages the internal parts of pump.



Prohibited

Ventilation

Fumes or vapors can be hazardous with certain solutions. Ensure proper ventilation at the operation site.



Requirement

Do not install/store the pump:

- Where ambient temperature can exceed 0-40°C (32-104°F).
- In a flammable atmosphere or in a dusty/humid environment.
- In direct sunlight or wind & rain.
- In mechanical vibration.
- In a corrosive atmosphere such as chlorine gas.



Prohibited

Spill precautions

Ensure protection and containment of solution in the event of plumbing or pump damage (secondary containment).



Requirement

Do not stand on the pump

Personal injury may result as the pump turns over.



Prohibited

Do not touch the pump or pipe with bare hands

Risk of burning. The surface temperature of the pump or pipe rises high along with liquid temperature in or right after operation.



Caution

Keep electric parts and wiring dry

Risk of fire or electric shock. Install the pump where it can be kept dry.



Keep away from around the pump when turning ON power

The pump doesn't have an ON-OFF switch and starts as the rated power voltage is provided.



Remove foreign matters

Turn off power and clean the pump if foreign matters enter the pump. Otherwise, the pump may be damaged.



Static electricity

When low electric conductivity liquids such as ultra-pure water and fluor inactive liquid (e.g. Fluorinert™) are handled, static electricity may generate in the pump and may cause static discharge. Take countermeasures to remove static electricity.



Check pump head bolts

Liquid may leak if any of pump head bolts become loose. Tighten the bolts diagonally and evenly by 1.6N•m before initial operation and at regular intervals.



Do not use the pump in a wet location

The pump is not waterproof. Use of the pump in wet or extremely humid locations could lead to electric shock or short circuit.



Do no use a damaged pump

Using a damaged pump could lead to an electric shock or death.



Disposal of the used pump

Dispose of any used or damaged pump in accordance with local rules and regulations. If necessary, consult a licensed industrial waste disposal company.



Do not pressurize the pump excessively

If the pump is pressurized over the maximum discharge pressure, O ring seal may be impaired and leakage may result.





Precautions for use

- Electrical work should be performed by a qualified electrician. Otherwise, personal injury or property damage could result.



- Do not install the pump:
 - Where ambient temperature can exceed 0-40°C (32-104°F).
 - Where ambient humidity can exceed 35-85RH.
 - In a flammable atmosphere or in a dusty/humid environment.
 - In direct sunlight or wind & rain.
 - In mechanical vibration.
 - In a corrosive atmosphere such as chlorine gas.

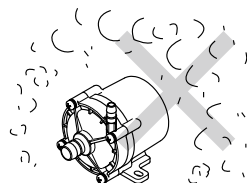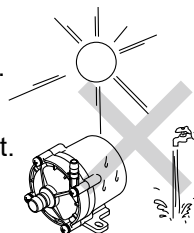


- Allow sufficient space around the pump for easy access and maintenance.



- Use care handling the pump. Do not drop. An impact may affect pump performance. Do not use a pump that has been damaged to avoid the risk of electrical damage or shock.



- This pump is not capable of self-priming. Always prime the pump before operation.

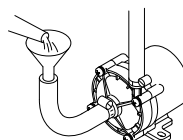

- The pump is not waterproof. Do not operate the pump while wet with solution or water. Failure or injury may result. Immediately dry off the pump if it gets wet.



- Do not close discharge line during operation. Solution may leak or piping may break.




- Solution in the discharge line may be under pressure. Release the pressure from the discharge line before disconnecting plumbing or disassembly of the pump to avoid solution spray.



- Wear protective clothing when handling or working with pumps. Consult solution SDS for appropriate precautions. Do not come into contact with residual solution.



- Do not clean the pump or nameplate with a solvent such as benzene or thinner. This may discolour the pump or erase printing. Use a dry or damp cloth or a neutral detergent.

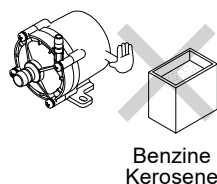

- In accordance with the European Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), this product features the crossed-out wheelie bin symbol. When this product is disposed of in household wastes, toxic components included in it can cause major environmental and human health problems. Use appropriate waste collection systems for recovery and recycling. Contact your local distributor or nearest Iwaki company for the detailed collection systems.




Overview

Pump characteristics, features and part names are described in this section.


Introduction

Pump structure & Operating principle

The NRD pump is a canned motor pump with a brushless DC motor. The magnetic force of the motor rotates the driven magnet in order for the impeller to revolve in the pump chamber, where a liquid is transferred from the inlet to outlet.

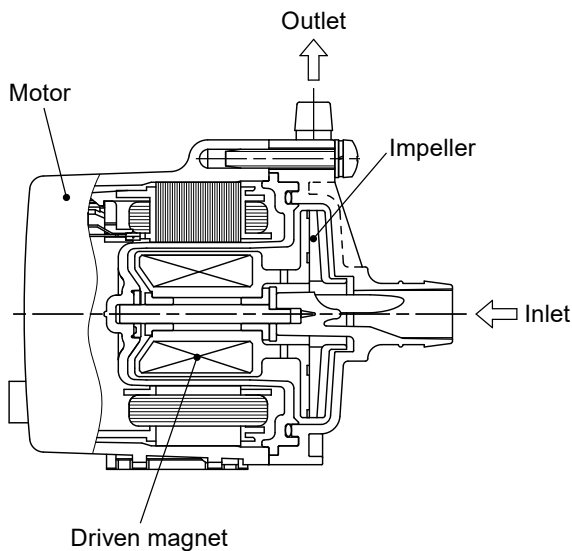

Part names

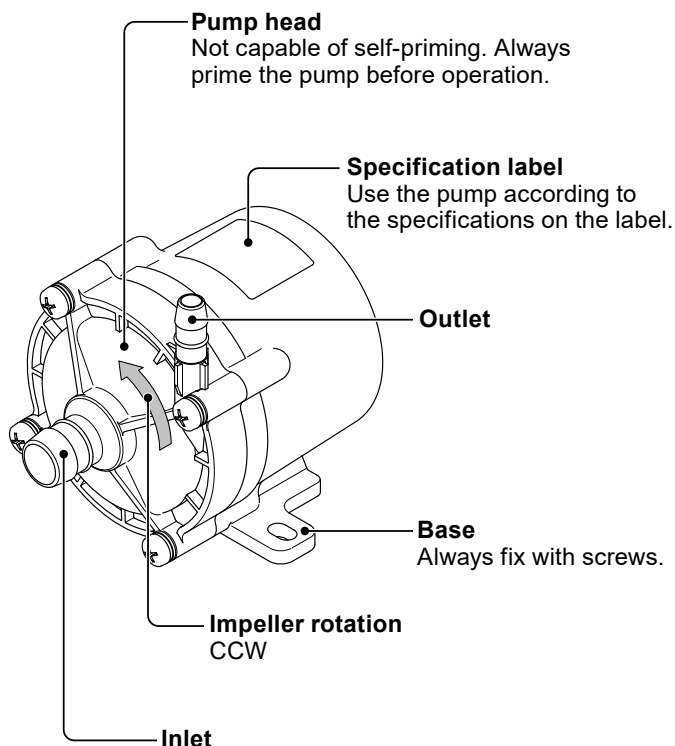

Limitations

Before operation

Water hammer phenomenon may occur when starting or stopping operation, especially when the discharge line is too long.

When starting operation:

First prime the pump and close the discharge valve. Run the pump and then start to open the valve slowly until it meets a duty point.

When stopping operation:

Slowly close the discharge valve until it bottoms out. Then turn off power to stop the pump.

*Do not close the discharge line sharply, or water hammer phenomenon may occur and damage the pump with impact pressure.

Priming

This pump is not capable of self-priming. Always prime the pump before operation. Running the pump without priming water, internal parts are excessively worn by friction heat and fatal pump damage results.


Liquid to be handled

Do not use the following liquids.

- Fluids which inflate polypropylene
- Paraffinic hydrocarbons such as gasoline and kerosene
- Halogenated hydrocarbons such as trichloroethylene and carbon tetrachloride
- Ether and low-grade ester
- Slurry (never use slurry, which wears out the pump bearing.)
- Magnetic fluid
- Explosive or flammable liquid

A strong magnet is inside the pump.

Do not use the pump with any liquid which contains metals such as iron and nickel.

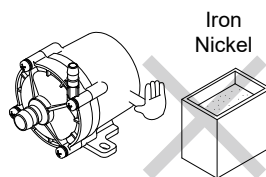

Observe the viscosity limit of 1mPa·s with the max SG of 1.07.

Pure water may bring poor lubrication to the bearing. Contact us in advance.

Effect of temperature change

Viscosity, vapour pressure or corrosiveness changes with liquid temperature.

Observe the allowable ranges of ambient/liquid temperatures on page 34.

ON-OFF operation

Do not cycle the pump more than 2 times per minute. Also, observe the allowable shortest ON time (15 seconds) and OFF time (also 15 seconds). This holds true for both the PWM control and the direct power cycling.

Identification codes

The model code represents the following information.

NRD - 08Z T V 24 P4 - R S

a b c d e f g h

a. Series name

NRD

b. Pump size

08Z

c. Bearing material

T: Filled PTFE

d. O ring material

V: FKM

E: EPDM

e. Power voltage

24: 24VDC

f. Speed control

P4: PWM (Pulse Width Modulation)

g. Connection

No code: Tube

R: R thread

N: NPT thread

h. Base

No code: Sideways-mounted

S: Longways-mounted

Installation

Installation of the pump, tubing and wiring are described in this section.

! Observe the following points

- Risk of electrical shock. Be sure to turn off power to stop the pump and related devices before service is performed.
- If you notice any abnormal or dangerous conditions, suspend operation immediately and inspect/solve problems.
- Do not place explosive or flammable material near the pump.
- Use of a damaged pump could lead to an electric shock or death.
- A strong magnet is inside the pump. Do not bring a watch or magnetic device which may be adversely affected by a magnetic force.

Pump mounting

1 Select a suitable place


Allow sufficient space around the pump for easy access and maintenance.

- Select a level location, free from vibration, that won't hold liquid. If the pump is not installed level, output may be affected.
- Keep good ventilation, taking account of the self-heating of pump.

2 Mounting position

This pump is not capable of self-priming.

Always keep a liquid level 30cm higher than the outlet of the tank, or air may enter a suction line and the bearing may be worn badly.

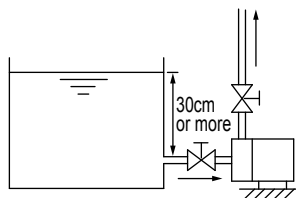


3 Anchor the pump

Use four bolts so it doesn't vibrate. See page 36 & 37 for the mounting hole size or suitable bolt size.

NOTE

Do not mount the pump in a vertical direction.

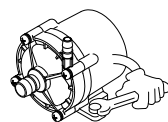


Pipework


Connect tubes to the pump and install a check valve.

Precautions

- Using a high flow pump and a small supply tank, a liquid level in the tank changes greatly.
- Do not allow a drop of adhesive agent or sealant into plumbing/tubing. It may cause fatal damage to the pump.
- Use measures to keep the pump connections free from stress. Weight and thermal expansion/contraction of the plumbing/tubing can stress connection points.
- Air may be entrained into the suction line when the supply tank is refilled during operation. Take any action to prevent air ingress such as installing a baffle.
- Make sure every joint in plumbing/tubing is securely sealed.
- Use a corrosion-/pressure-resistant pipe or a Teflon/braided tube. This is important especially for the suction line, or it can be crushed by negative pressure (especially with hot liquid).

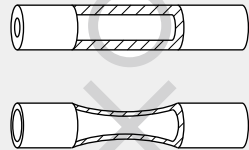


Plumbing layout

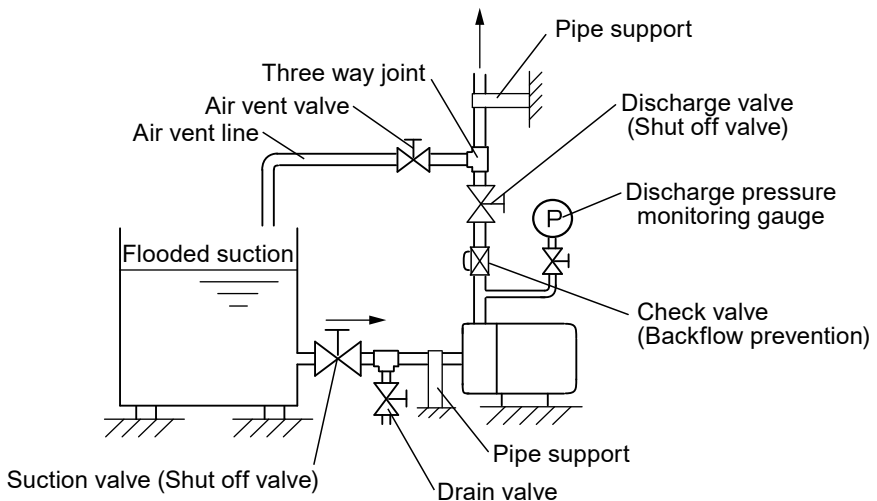

■ Discharge & Suction valves

Install a ball valve on the discharge line, as close to the pump outlet, for the adjustment of a flow rate/delivery head or shutting off a flow, and the other ball valve on the suction line, as close to the pump inlet, for the convenience of maintenance or shutting off a flow.

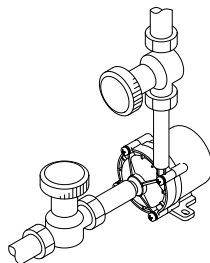

■ Pressure gauge

Install a pressure gauge for monitoring discharge line pressure.

■ Drain valve

Install a drain valve in between the pump inlet and the suction valve for blowing down liquid.

Plumbing

Tube


1 Cut the tube end flat

Select an optimal tube size in accordance with the pump inlet and outlet.





2 Connect tubes onto the pump inlet/outlet

First slide a tube clamp onto a tube. Then push the tube end onto the pump inlet/outlet until it bottoms out.

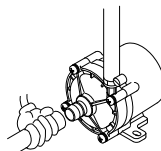

3 Tighten the tube clamp

And eliminate the possibility of a leak.

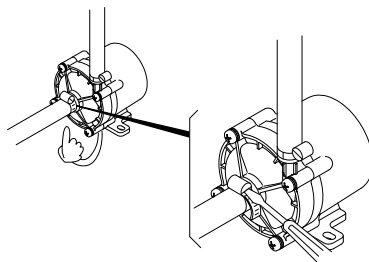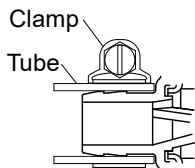

NOTE

- Do not use excessive force. The plastic inlet and outlet may break.
- Always use a screw/band tube clamp. Do not use wire clamp.

1 Prepare plastic thread pipes

Do not select a metal pipe which can break the plastic inlet/outlet.

2 Apply thread sealing tape

Wrap a sealing tape two to three turns to the pump inlet and outlet. Be careful not to wrap too many times, or connection points may break.

NOTE

Do not use a liquid sealant which could attack plastics.

3 Tighten the plastic thread pipes

Do not hold the motor. Hold the pump head and tighten the plastic pipe to the pump inlet/outlet by the rated tightening torque below.







Model	Inlet	Outlet
NRD-08Z	4.0N•m or below	2.0N•m or below

Plumbing precautions

Suction line

- In order to minimize plumbing resistance, have plumbing shortest with the minimum bends. Note cavitation* tends to occur when plumbing length is too long.
- A liquid level should be at least 30cm higher than the tank outlet for the prevention of air ingress.
- Keep liquid in a supply tank free from foreign matters. Clean the tank at intervals.
- Avoid any loops in a plumbing run that could form a vapour trap. A suction line should be laid on a rising gradient of 1/100 toward the pump so as to expel entrained air automatically.
- Be sure to secure connections on the suction line for the prevention of entrained air. The presence of air in the suction line may prevent liquid delivery.
- Do not use a suction tube, pipe or coupler with a smaller I.D. than the pump inlet.

Suction line examples

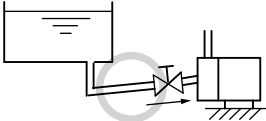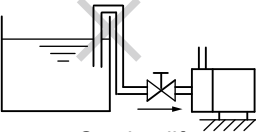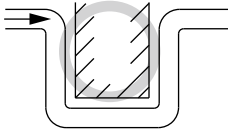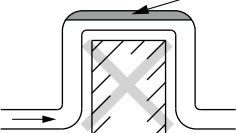Acceptable	Unacceptable
 Ascending gradient	 Descending gradient
 Flooded suction	 Suction lift
 U-shaped piping	 Arched piping

Glossary

Cavitation

Air bubbles caused by a negative pressure in the pump head, accompanied with vibration and noise. Performance deterioration or part damage results.

■ Discharge line

- Use measures to keep the pump connections free from stress. Weight and thermal expansion/contraction of the plumbing can stress connection points.
- The longer the plumbing length, the more pipe resistance. If the plumbing length is long, widen the pipe I.D. accordingly to reduce the pipe resistance and ensure the rated pump performance is kept.
- Liquid in the pump and plumbing may freeze and consequently cause damage at a freezing temperature. Drain or flush the pump and plumbing before leaving them for a long period.

Wiring

Wiring for power source, earthing and external signal.

Observe the following points

- Electrical work should be performed by a qualified electrician. Conform to local electric codes.
- Risk of electrical shock. Be sure to turn off power to stop the pump and related devices before service is performed. Or an electrical shock or short circuit may result.
- Be careful for power not to be turned on during work.

Power line

- Check that the main power is turned off.
- Electrical work should be performed in accordance with local electric codes, with an appropriate wire gauge or so.
- Apply the rated power voltage. See the spec label.
- The pump doesn't have an ON-OFF switch and starts as the power cable is plugged in with the proper PWM duty cycle.
- When an external fuse is used and it has blown, always solve the root cause of blowout. Be sure to unplug the pump before investigation.
- Check power voltage has reduced to 0VDC before turning on power, especially right after operation. Otherwise, the pump may not start to run.

- Use a DC power supply that assures voltage increment to 24VDC within 50ms. If it takes more than 50ms, the pump may not start to run.
- Use the PWM control signal (terminal 1 and 3) in order to make the ON-OFF operation. If you want directly turn on and off the DC power voltage instead, install the switch between the DC power supply and the pump. Installing it between the DC power supply and the AC power supply, the pump may not run.



Wiring example

- Induction noise comes from the DC power solenoid and relay. Make sure it does not affect peripheral devices in your system, especially when the same DC power supply is shared with such a solenoid and a relay.
- Switching noise accompanies operation of the DC motor. Make sure it does not affect peripheral devices in your system.
- If the DC power supply is shared with the DC power solenoid or relay, take protective measures against surge.

PWM (Pulse Width Modulation) control


The speed of this pump can be controlled with the PWM control signal, which comes from the NPN bipolar transistor (an open collector output type) or the MOSFET (an open drain output type) of your device such as a PLC (Programmable Logic Controller) to the pump terminal 1 and 3 (see page 24.).

If your device uses the NPN bipolar transistor, the Collector-Emitter saturation voltage of the open collector must be 1VDC or below.


The pulse width of the PWM signal can be modulated within the 0-100% duty cycle and the 400Hz±10% signal frequency.

- When the NPN bipolar transistor of your device is switched ON, the voltage applied to the terminal 1 comes to "Low" that is 1VDC or below, and when it's OFF, the voltage comes to "High" that is 5VDC. That is to say, the PWM control signal duty cycle of the ON-OFF time is always inverted. Take this into your consideration.

- Observe the $400\text{Hz} \pm 10\%$ signal frequency, or the motor goes wrong.
- If you wish to establish the feedback control system with this product, you will need an external device with a pulse generator like a flow meter so that the pump will run in proportion to the incoming signal from such a device.
- As well as an open collector and an open drain, the motor can be driven by a TTL (Transistor-transistor logic).




■ PWM and Pump speed

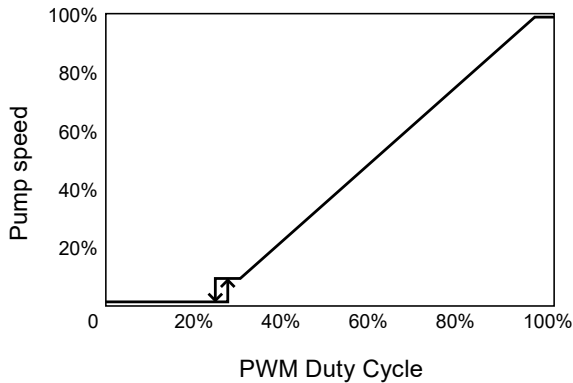

NOTE

- There is a variety of devices that generates the PWM control signal, and the pump performance could change depending on each device actually used.
- Also, the optimal duty cycle of the signal to run the pump best could change depending on plumbing, liquid characteristics, and other operating conditions. Additional adjustment will be needed to determine the optimal duty cycle.

■ Motor-driver input circuit

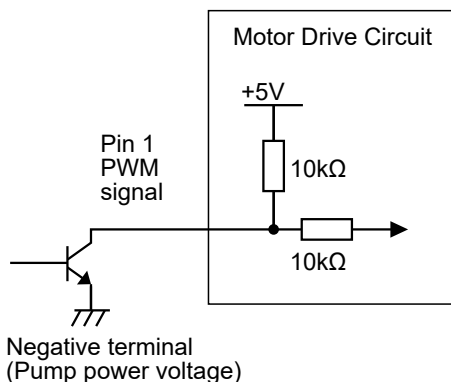


Encoder output

The pump out (the terminal 2 and 3, an open collector type NPN bipolar transistor) transmits the pulse signal in sync with the pump speed (one pulse per rotation).

- This output circuit is protected with the 1kΩ resistance. Take this into your consideration if it is connected to the input circuit with a pull-up resistor of your device including a PLC.
- This output circuit is capable of handling the applied voltage up to 24VDC. Do not exceed that rate when your device is used to apply voltage to the terminal 2 and 3.

■ Motor-driver output circuit

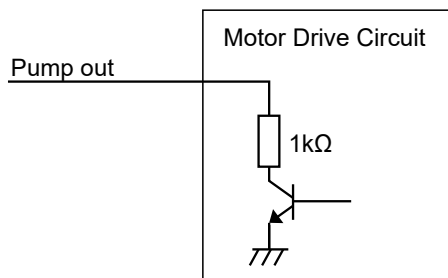

Rated/Starting current

Rated current is 2.1A. Starting current is also 2.1A.


Wiring examples

A 500mm option cable is available.

■ Specification (connector)

Pin assignment				Receptacle	Applicable connector		Applicable
1	2	3	4	M. housing	F. housing	Terminal	lead wire
PWM control signal input (+)	Pump out (+)	Power voltage (-)	Power voltage (+)	CA01A1-04BA	CA01A6-04B0-02	CA01C6-010A	AWG#22 AWM3265


*The power voltage (-) of the terminal 3 is common to the PWM control signal and the pump out signal.

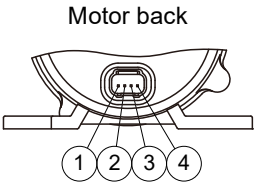

NOTE

Observe polarity, otherwise failure or malfunction may result. Note that the rotational direction of the motor can not be changed by reversing polarity.



■ Wiring diagram (general)

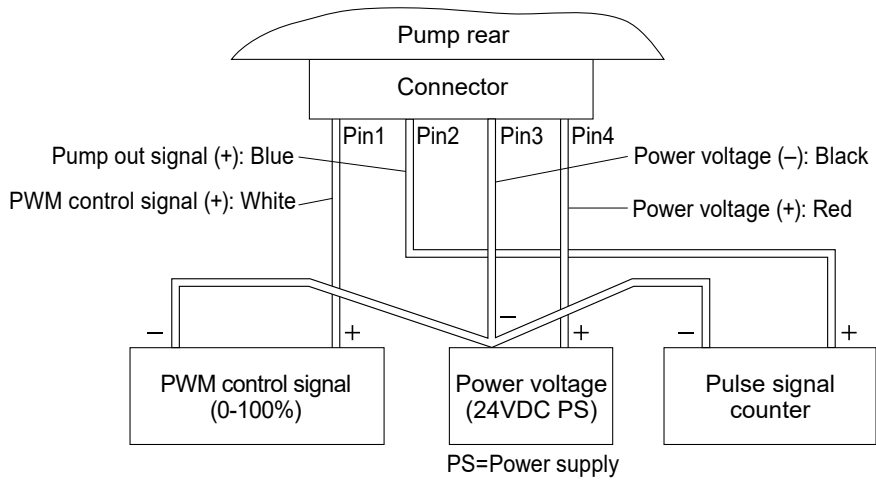

■ Wiring diagram (with no PWM control signal)

The pump is able to run with no PWM control signal when electrically wired as follows. In this case the pump runs at the maximum speed.

Pin assignment			
1	2	3	4
Open circuit	Pump out (+)	Power (-)	Power (+)

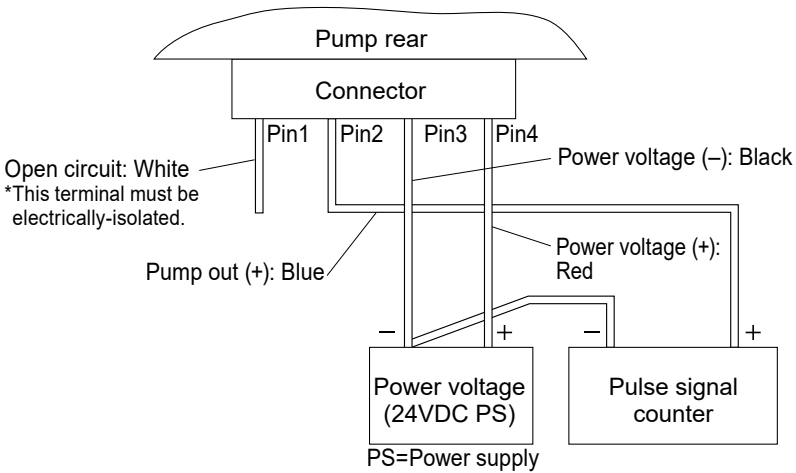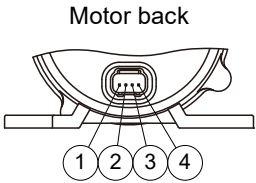

Operation

The pump becomes ready after pipework and wiring is completed.

! Observe the following points

- Do not operate the pump with the suction valve (gate valve) closed. Otherwise, the internal parts of the pump will be damaged.
- For the prevention of water hammer, close the discharge valve completely at the start of operation and then gradually open the valve as discharge pressure increases.
- Do not close the discharge line during operation. Or liquid temperature rise may damage the pump.
- Risk of scald injury. The surface temperatures of the pump and pipe rise high along with liquid temperature. Do not touch the pump or pipe surface directly in or right after operation.
- Do not cycle the pump more than 2 times per minute. Also, observe the allowable shortest ON time (15 seconds) and OFF time (also 15 seconds). This holds true for both the PWM control and the direct power cycling.

Pump operation

Start-up

No.	Procedure	Points to be checked
1	Check plumbing, wiring and power voltage.	• See "Pipework" and "Wiring" sections. • Check the spec label for specified supply voltage.
2	Clean the inside of tubing/piping and tank. Then prime the pump.	• Do not allow foreign matters to enter the pump.
3	Open a valve.	• Fully open a suction valve. • Fully close a discharge valve. • Close an air vent valve as necessary.
4	Supply the main power and send the PWM control signal.	• The pump may not start to run if the PWM control signal is less than 60% (duty cycle), and the internal protective circuit locks the motor as starting torque is too low. Increase the signal to 60% or more to run the motor and then reduce to a target value. • The minimum starting torque changes with plumbing, liquid property and other operating conditions.

No.	Procedure	Points to be checked
5	Open a discharge valve to adjust a flow to a specified level.	• Open a discharge valve slowly to meet a duty point. Do not rotate the valve sharply. • The allowable minimum flow rate is one tenth of the max flow rate. Operation below that flow rate builds up friction heat to a break down if it continues more than 1 minute. • Turn off power if operation is upset, see the trouble-shooting section.
6	Expel air from the pump.	• Air may not be expelled well if plumbing resistance is too high. Install air vent line as necessary. • Completely expel air from the pump. Or the bearing will be badly worn. • Keep the discharge line resistance to 1m or below and repeat 15-second operation about 5 times.
7	Check the operation	• Do not allow foreign matters to enter the pump. Foreign matters may cause the impeller to be locked, hindering liquid circulation. In this case turn off power immediately and contact us. • Turn off power when the fuse has blown. Investigate a root cause according to the troubleshooting section.

*If the pump is provided with the 24VDC power voltage whilst the input circuit of the PWM control signal is opened, the pump starts to run at the maximum speed. We would rather recommend use of the PWM control along with the 24VDC power voltage and increase the duty cycle from 0% to your duty point.

NOTE

Turn off power immediately at system upset. See the troubleshooting section.

Shutdown



Observe the following points

- Liquid in the pump and plumbing may freeze and consequently cause damage at a freezing temperature. Drain or flush the pump and plumbing before leaving them for a long period.
- Use a heater to prevent liquid from freezing when the pump is temporarily stopped at a freezing temperature.
- In case of power failure, switch off the pump and close the discharge valve.

No.	Procedure	Points to be checked
1	Close a discharge valve slowly.	• Do not cause sudden closure by using a solenoid valve, or pump may be damaged.
2	Reduce the PWM control signal. And then turn off main power (24VDC).	• The pump does not always stop at the same level of the PWM duty cycle as it is reduced. It varies with plumbing, power spec and other operating conditions. • When phasing down the level of the PWM duty cycle, the pump may stop before a signal level falls below 20% but then the motor may still be charged. Be sure to reduce the signal level to 10% or below before turning off main power. • Follow the Start-up procedure every time the pump is rebooted. If the pump does not run, inspect the pump.

*If the input circuit of the PWM control signal is opened whilst the pump is provided with the 24VDC power voltage, the pump starts to run at the maximum speed which may be unexpected behaviour for you.

Maintenance

Troubleshooting, inspection, wear part replacement, exploded views and specifications are described in this section.

Troubleshooting

Handling of the pump, maintenance and inspection should be carried out within this instruction manual. Do not go beyond the descriptions in this manual.

It is not the manufacturer's responsibility for personal injury or property damage resulting from unauthorized service. Contact us or your nearest distributor as necessary.

States	Possible causes	Solutions
Abnormal heat	A motor has locked up or a circuit has failed.	Contact us.
	Specific gravity or viscosity is too high.	Replace with a suitable pump.
	Liquid and ambient temperature are out of spec.	Contact us.
Pump does not run.	Wrong wiring	Inspect wiring. Rewire as necessary.
	A motor has locked up or a circuit has failed.	Contact us.
	Specific gravity or viscosity is too high.	Replace with a suitable pump.
	Power capacity shortage	Check power capacity.
	Frequent ON-OFF	Avoid a high ON-OFF frequency. See page 13.
	An improper PWM duty cycle	Optimise PWM duty cycle.
Flow rate/delivery head is too low.	Air trap in the pump	Expel air.
	Entrained air from the suction line	Check the line.
	Dry running	Check for possibility of dry running before operation.
	Specific gravity or viscosity is too high.	Replace with a suitable pump.
	Pump head mounting screws are loose.	Tighten the mounting screws by 1.6 N•m.
	An improper PWM duty cycle	Optimise PWM duty cycle.

States	Possible causes	Solutions
Over current	Wrong wiring	Inspect wiring. Rewire as necessary.
	A motor has locked up or a circuit has failed.	Contact us.
	Dry running	Check for possibility of dry running before operation.
	Specific gravity or viscosity is too high.	Replace with a suitable pump.
Significant noise and vibration	A motor has locked up or a circuit has failed.	Contact us.
	Air trap in the pump	Expel air.
	Dry running	Check for possibility of dry running before operation.
Leakage	Pump head mounting screws are loose.	Tighten the mounting screws by 1.6 N•m.
Pump speed is out of control.	Wrong wiring	Inspect wiring. Rewire as necessary.
	A motor has locked up or a circuit has failed.	Contact us.
	An improper PWM duty cycle	Optimise PWM duty cycle.
Pump out signal is not outputted.	Wrong wiring	Inspect wiring. Rewire as necessary.
	A motor has locked up or a circuit has failed.	Contact us.
	Pump out signal is NOT connected to the input circuit with a pull-up resistor of your device.	Connect the signal in the correct manner. See page 23.

Retightening of pump head fixing screws

After a long period of operation or storage, the pump head mounting screws may come loose. Tighten the mounting screws by 1.6N•m as necessary. Do not use excess force. The plastic pump head may deform.

Drainage

No drain port is provided to this pump. See drainage procedure below.

! Observe the following points

- Turn off power before drainage.
- Always wear protective clothing such as an eye protection, chemical resistant gloves, a mask and a face shield during disassembly, assembly or maintenance work. The specific solution will dictate the degree of protection. Refer to SDS precautions from the solution supplier.
- Solution in the discharge line may be under pressure. Release the pressure from the discharge line before disconnecting plumbing or disassembly of the pump to avoid solution spray.
- Do not drain chemical liquids directly on the ground or the floor. Dispose of chemicals in accordance with local rules and regulations.
- The pump is not waterproof. Do not operate the pump while wet with solution or water. Failure or injury may result. Immediately dry off the pump if it gets wet.
- Dilute and flush out harmful liquid before removing a tube or a pipe.


Blowdown

1 Turn off power

Make sure no one turns on power by mistake in service.


2 Close both the discharge and suction valves

Use the drain valve if it's equipped on the suction line; however, this manner won't empty the pump completely.

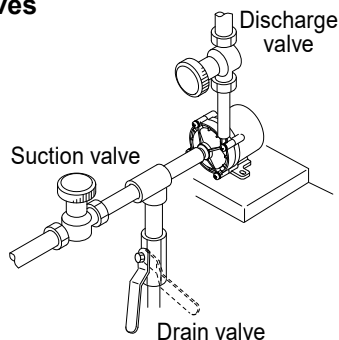

3 Remove tubes or pipes from the inlet and outlet

Collect residual liquid from plumbing in a container.

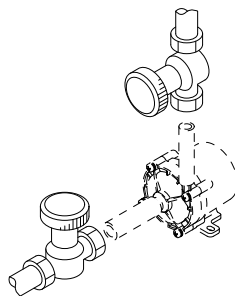


NOTE

Do not get wet with dripping residual liquid.

4 Remove anchoring bolts of the pump

5 Drain liquid directly into the container

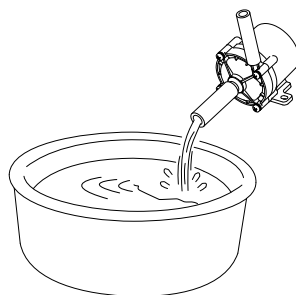

Perform daily and periodic inspections to keep pump performance and safety.

Daily inspection

Check the following points. If you notice any abnormal or dangerous conditions, suspend operation immediately and inspect/solve problems according to the troubleshooting section. If it does not help removing problems, contact us or your nearest distributor. Do not disassemble the pump.

No.	States	Points to be checked	How to check
1	Evidence of a leak	• Check for a leak. Do not start operation with a leak.	Visual
2	Pumping upset	• If liquid is pumped.	Flow meter or visual inspection
		• If the suction pressure and the discharge pressure are normal.	Check specification.
		• If a liquid level in a supply tank is proper.	Visual
		• If liquid is deteriorated, crystallized or settled.	Visual or audio inspection
3	Noise and vibration	• If abnormal noise or vibration occurs. They are signs of abnormal operation.	Visual or audio inspection
4	Air ingress from pump head joints and a suction line	• If discharge liquid includes air bubbles, check lines for a leak and retighten as necessary.	Visual or audio inspection
5	Load to the pump	• If discharge pressure and electric current are normal.	See the motor spec label.
6	Abnormal parameters	• If discharge pressure, a flow rate or load current fluctuates. If so, see the troubleshooting section.	See the performance specification.

Specification

Model code	Connections		Max flow	Max head	Max noise	Max SG	Motor		Weight
	Inlet	Outlet					Power voltage	Rated output	
NRD-08Z	ø14mm	ø8mm	8.0L/min	19m	45dB	1.07	24VDC	33W	0.4kg
	R3/8"	R1/8"							
	NPT3/8"	NPT1/8"							

*The max flow & head fields show average values obtained at our shipping inspection.

There may be deviation up to $\pm 10\%$ of the values on each individual.

*The measuring conditions of a noise level: 1m away from the pump front, A scale.

*This data is based on pumping clean water at ambient temperature.

*The maximum viscosity is 1mPa•s with the max SG of 1.07.

*Observe the allowable ranges of ambient temperature/humidity and liquid temperature as below. Note the ranges may change with operating conditions such as development of heat cycle (do not use the prohibited liquid on page 13).

Model	Ambient temperature	Liquid temperature	Ambient humidity
NRD-08Z	0-40°C	0-50°C	35-85%RH

*The pumps are equipped with a BLDC motor and its drive circuit provides the following protections.

a. Pump lock protection

A speed detector monitors the impeller speed. The motor stops when it is upset by foreign matters. Solve the root causes and then reboot. Now the pump is ready to restart.

b. Heat protection

The pump stops when the motor temperature becomes extremely high due to a sharp rise of an ambient/liquid temperature or an overload to the motor. Solve the root causes and then reboot. Now the pump is ready to restart.

c. Overcurrent limiting control circuit

The drive circuit is protected from a surge current.

d. Fuse


A fuse is equipped in driving circuit in order to protect other equipment or to prevent a fire which may occur when an internal circuit has failed.

The built-in fuse can not be replaced. If necessary, install an external time-lag surge withstand fuse to protect the built-in fuse.

Model	Blow out ampere
NRD-08Z	3.0A


■ NRD-08Z

No.	Names	Materials
1	Front casing	GFRPPE
2	Bearing	Filled PTFE
3	Rear casing	GFRPPE
5	O ring	FKM or EPDM
6	Impeller	GFRPP
8	Spindle	Alumina ceramic
9	Thrust	Alumina ceramic

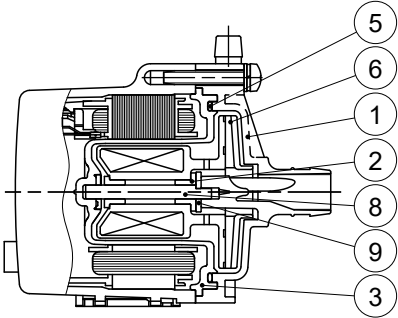

Outer dimension


■ NRD-08Z with sideways-mounted base

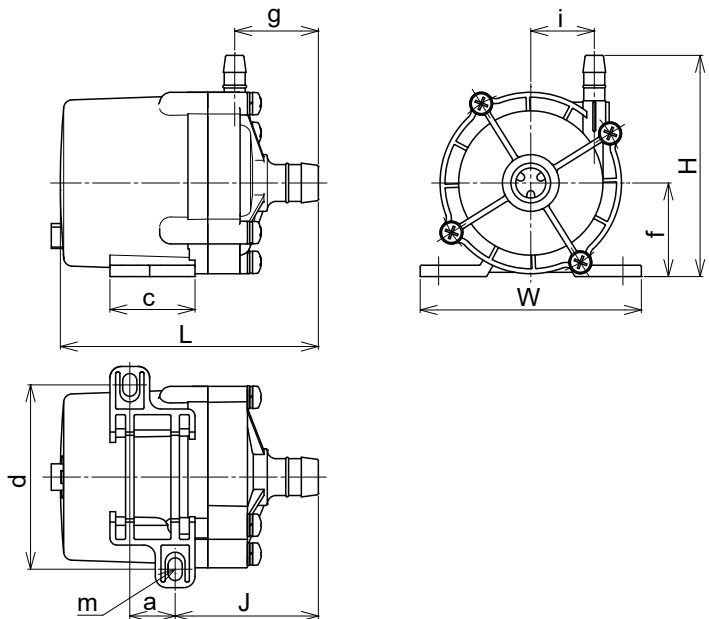

Unit (mm)

Connection	W	H	L	a	c	d	f	g	i	J	m
Tube	78	78	91	16	30	65	33	29.5	22.4	50.5	2×5×8
R thread		75.5	90.5					29		50	
NPT thread											

■ NRD-08Z with longways-mounted base

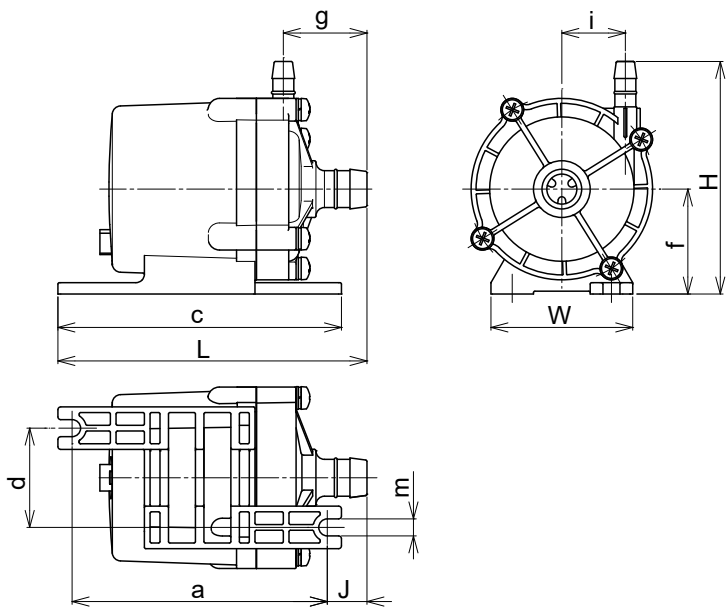


Unit (mm)

Connection	W	H	L	a	c	d	f	g	i	J	m
Tube	50	82	109	90	100	35	37	29.5	22.4	14	6
R thread		79.5	108.5					29		13.5	
NPT thread											

Performance curves

■ NRD-08Z

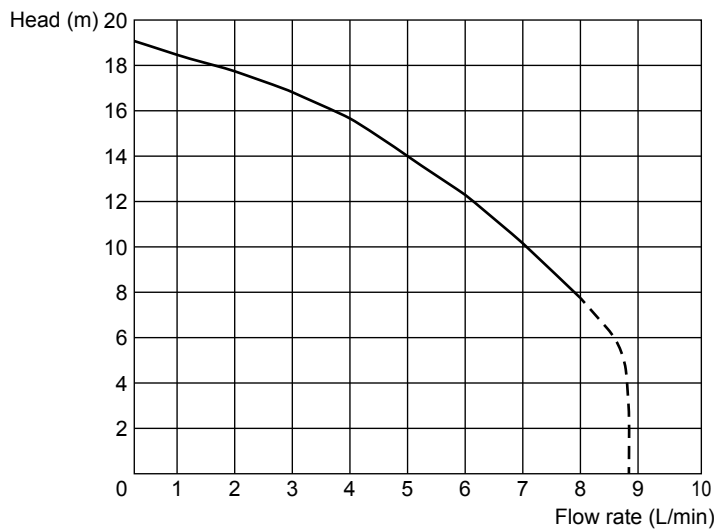

EC DECLARATION OF CONFORMITY

A copy of the original Declaration of Conformity

(SUPPLIER'S NAME)

WE

IWAKI CO.,LTD.

(ADDRESS)

6-6 2-CHOME KANDA-SUDACHO CHIYODA-KU TOKYO JAPAN

(PRODUCT)

DECLARE UNDER OUR SOLE RESPONSIBILITY THAT THE PRODUCTS
DIRECT DRIVE PUMP

(MODEL NAME)

NRD SERIES

TO WHICH THIS DECLARATION RELATES ARE IN CONFORMITY

WITH THE FOLLOWING STANDARDS OR DIRECTIVES AS FAR AS APPLICABLE

(DIRECTIVES)

MACHINERY DIRECTIVE 2006/42/EC (ANNEX IIA)

EMC DIRECTIVE 2014/30/EU

RoHS DIRECTIVE 2011/65/EU

(STANDARDS)

EN ISO12100:2010

EN61000-6-2:2005

EN IEC63000:2018

EN809:1998+A1:2009

EN61000-6-4:2007+A1:2011

(A PERSON WHO IS AUTHORISED TO COMPILE THE TECHNICAL FILE
IN THE COMMUNITY)

IWAKI EUROPE GMBH

SIEMENSRING 115 D-47877 WILlich GERMANY

NOTE: THIS DECLARATION BECOMES INVALID IF TECHNICAL OR OPERATIONAL
MODIFICATIONS ARE INTRODUCED WITHOUT THE MANUFACTURER'S
CONSENT.



TSUTOMU SAWADA

DEPUTY SENIOR GENERAL MANAGER,


QUALITY ASSURANCE HEAD OFFICE

Tokyo, Sep. 13, 2021

(PLACE AND DATE OF ISSUE)

(NAME AND SIGNATURE OR EQUIVALENT MARKING OF AUTHORIZED PERSON)

DOCUMENT NO. IS-51K-492-3

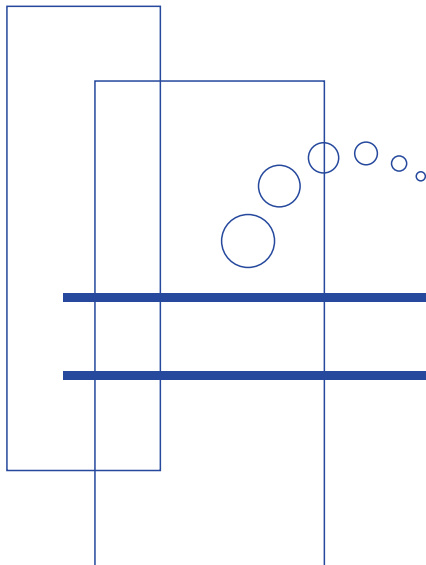

<https://www.iwakipumps.jp>

IWAKI CO., LTD. 6-6 Kanda-Sudacho 2-chome Chiyoda-ku Tokyo 101-8558 Japan
TEL: +81 3 3254 2935 FAX: +81 3 3252 8892

European Headquarter / IWAKI Europe GmbH
TEL: +49 2154 9254 0 FAX: +49 2154 9254 48

Germany / IWAKI Europe GmbH
TEL: +49 2154 9254 50 FAX: +49 2154 9254 55

The Netherlands / IWAKI Europe GmbH (Netherlands Branch)
TEL: +31 74 2420011 FAX: +49 2154 9254 48

Italy / IWAKI Europe GmbH (Italy Branch)
TEL: +39 0445 561219 FAX: +39 0445 569088

Spain / IWAKI Europe GmbH (Spain Branch)
TEL/FAX: +34 934 741 638

Poland / IWAKI Europe GmbH (East Europe Branch)
TEL: +48 12 347 0755 FAX: +48 12 347 0900

Belgium / IWAKI Belgium N.V.
TEL: +32 13 670200 FAX: +32 13 672030

Denmark / IWAKI Nordic A/S
TEL: +45 48 242345

Finland / IWAKI Suomi Oy
TEL: +358 10 201 0490

France / IWAKI France S.A.
TEL: +33 1 69 63 33 70 FAX: +33 1 64 49 92 73

Norway / IWAKI Norge AS
TEL: +47 23 38 49 00

Sweden / IWAKI Sverige AB
TEL: +46 8 511 72900

U.S.A. / IWAKI America Inc.
TEL: +1 508 429 1440 FAX: +1 508 429 1386

Argentina / IWAKI America Inc. (Argentina Branch)
TEL: +54 911 6477 4116

Brazil / IWAKI Do Brasil Comercio De Bombas Hidraulicas LTDA
TEL/FAX: +55 19 3244 5900

Singapore / IWAKI Singapore Pte Ltd.
TEL: +65 6316 2028 FAX: +65 6316 3221

Indonesia / IWAKI Singapore (Indonesia Office)
TEL: +62 21 6906606 FAX: +62 21 6906612

Malaysia / IWAKIm SDN. BHD.
TEL: +60 3 7803 8807 FAX: +60 3 7803 4800

Australia / IWAKI Pumps Australia Pty Ltd.
TEL: +61 2 9899 2411 FAX: +61 2 9899 2421

China (Hong Kong) / IWAKI Pumps Co., Ltd.
TEL: +852 2607 1168 FAX: +852 2607 1000

China (Guangzhou) / GFTZ IWAKI Engineering & Trading Co., Ltd.
TEL: +86 20 84350603 FAX: +86 20 84359181

China (Shanghai) / IWAKI Pumps (Shanghai) Co., Ltd.
TEL: +86 21 6272 7502 FAX: +86 21 6272 6929

Korea / IWAKI Korea Co., Ltd.
TEL: +82 2 2630 4800 FAX: +82 2 2630 4801

Taiwan / IWAKI Pumps Taiwan Co., Ltd.
TEL: +886 2 8227 6900 FAX: +886 2 8227 6818

Thailand / IWAKI (Thailand) Co., Ltd.
TEL: +66 2 322 2471 FAX: +66 2 322 2477